



**NIXIE
CLOCK**


LIST OF COMPONENTS

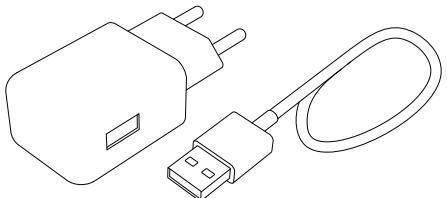


1x Adapter + Cable

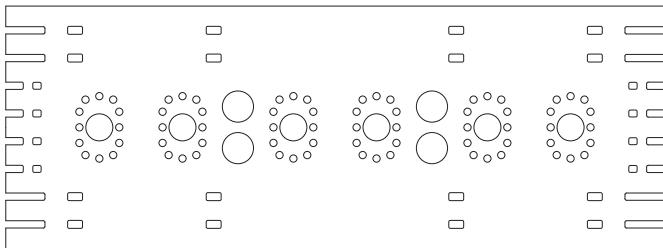


1x Front Mask

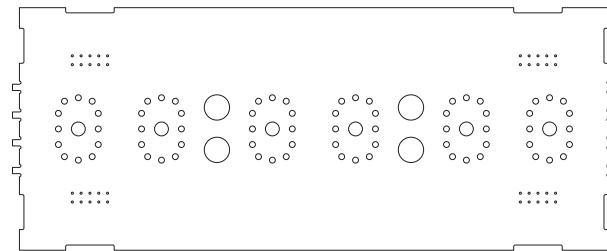

1x Main Board

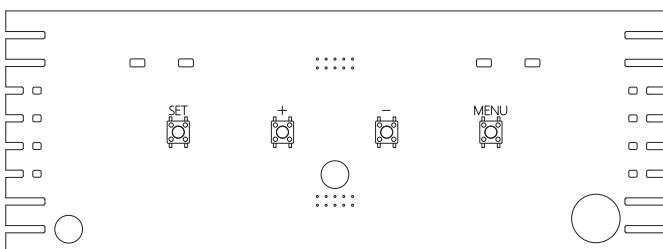

1x Back Board

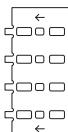

2x Sidewall




2x Wall Mount




2x Side Cover




8x Small Rib

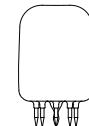


6x Nixie Tube

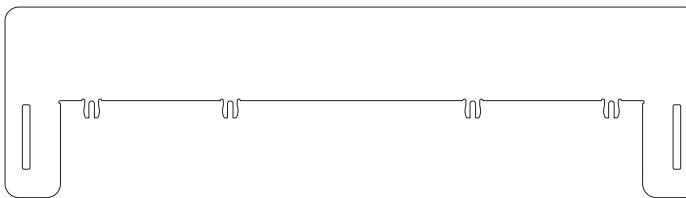

4x Large Rib

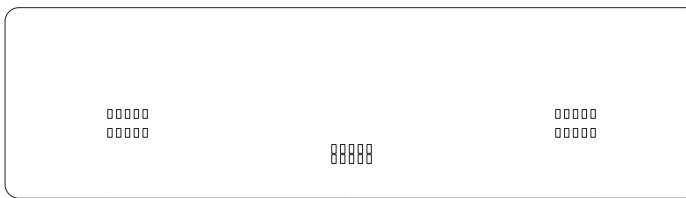

1x Top Board

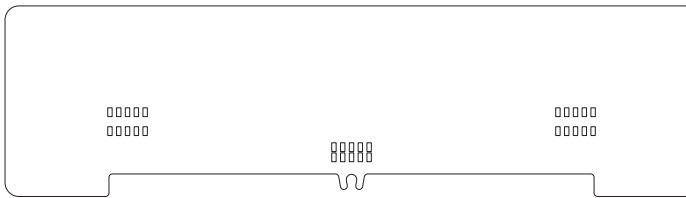

1x Bottom Board

NIXIE CLOCK

A Nixie tube (also called digitron) is a glass tube which contains a wire-mesh anode and multiple cathodes shaped like numbers.

The tube is filled with a gas, usually neon. Connecting cathode to electric voltage ignites an electric discharge which will surround the number with orange glow.


Nixies experienced the biggest boom in the 1960s. Today, the use of this technology is a rarity. It was replaced by fluorescent displays and later on by light emitting diodes.

Although the use of digitrons is now quite rare it is without questions the most beautiful type of display. Digitrons themselves are very rare.

The ones that got into your hands are a guaranteed original from the years 1970-1980. These digitrons are no longer produced and because they were made by hand, each piece is unrepeatably unique.

#NOYCEJOYCE

We are happy that this technology can bring you joy. Share with us photos of the Nixie Clock in your home and don't forget to tag #noycejoyce.

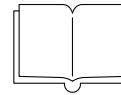

Follow the assembly instructions thoroughly.



Assemble carefully, some components are fragile.



Do not use metal objects such as tweezers, etc. to assemble.




Avoid contact with water.



Prevent both individual parts and the assembled clock from falling.




Keep out of reach of children.

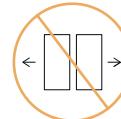



Not intended for repeated assembling.





This device is electrostatic sensitive.

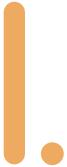

The parts were designed to fit together as tightly as possible so that their connection would therefore be as strong as possible. For this reason, more assembly force is required.

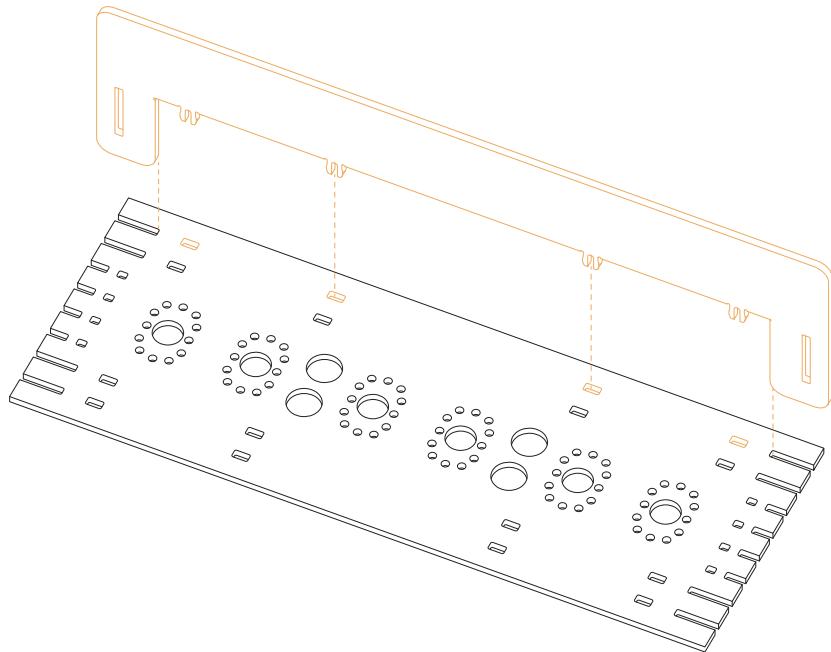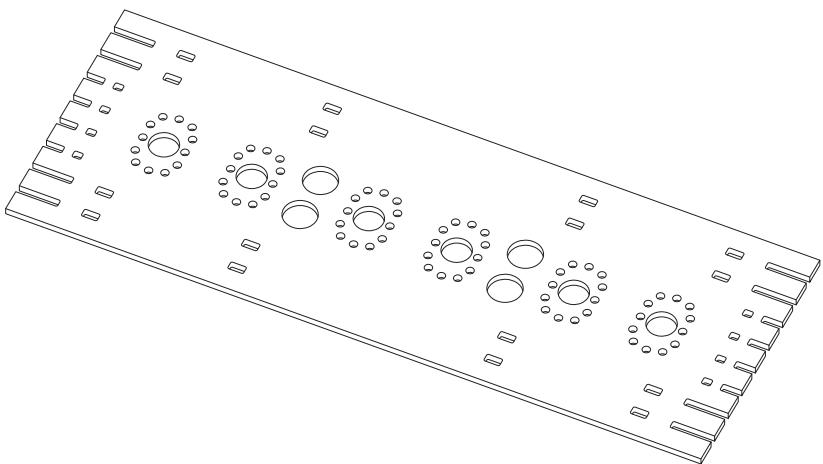

Tip: Rest both parts on a solid surface and push against it.

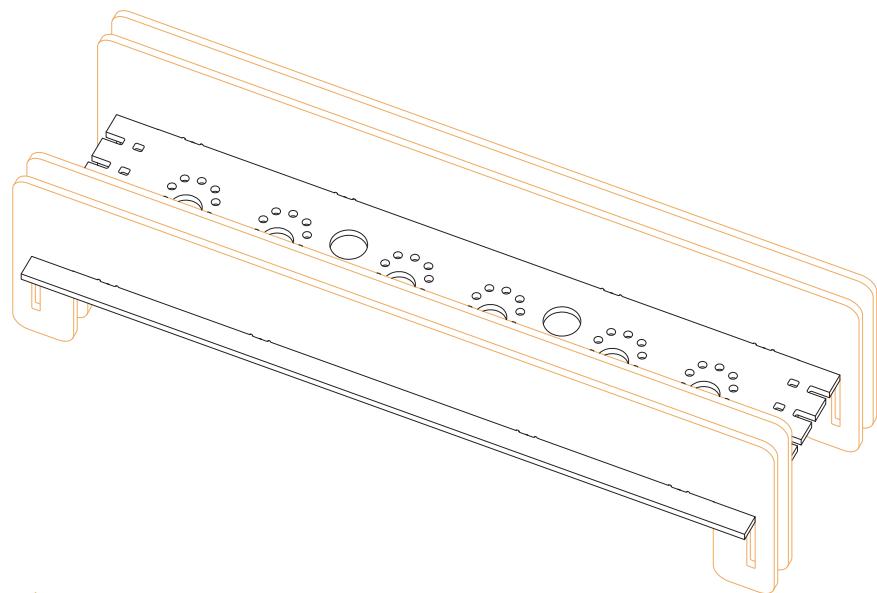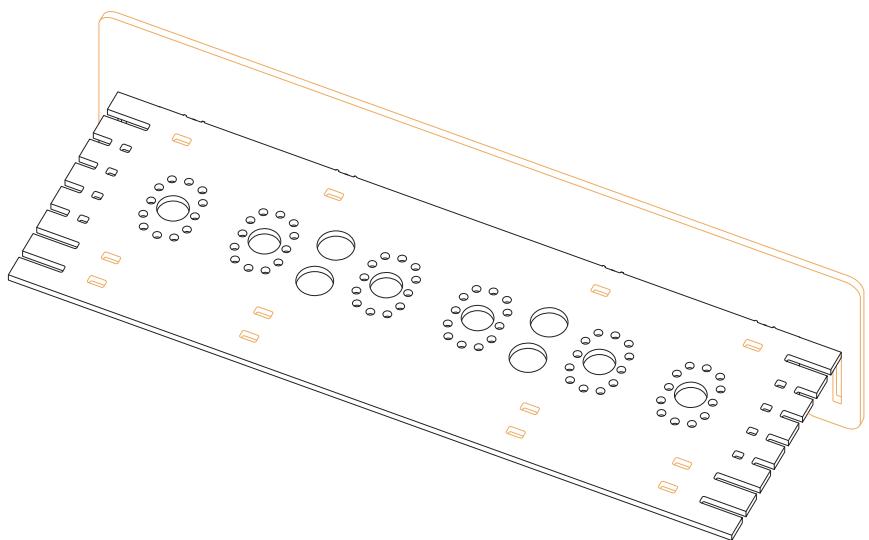


2.

Handle the main electronics with caution.



The neon bulbs (dots) are very fragile. Special care is required to not break or bend them.

Assemble in a clean and dry environment. The electronics must not come into contact with water.

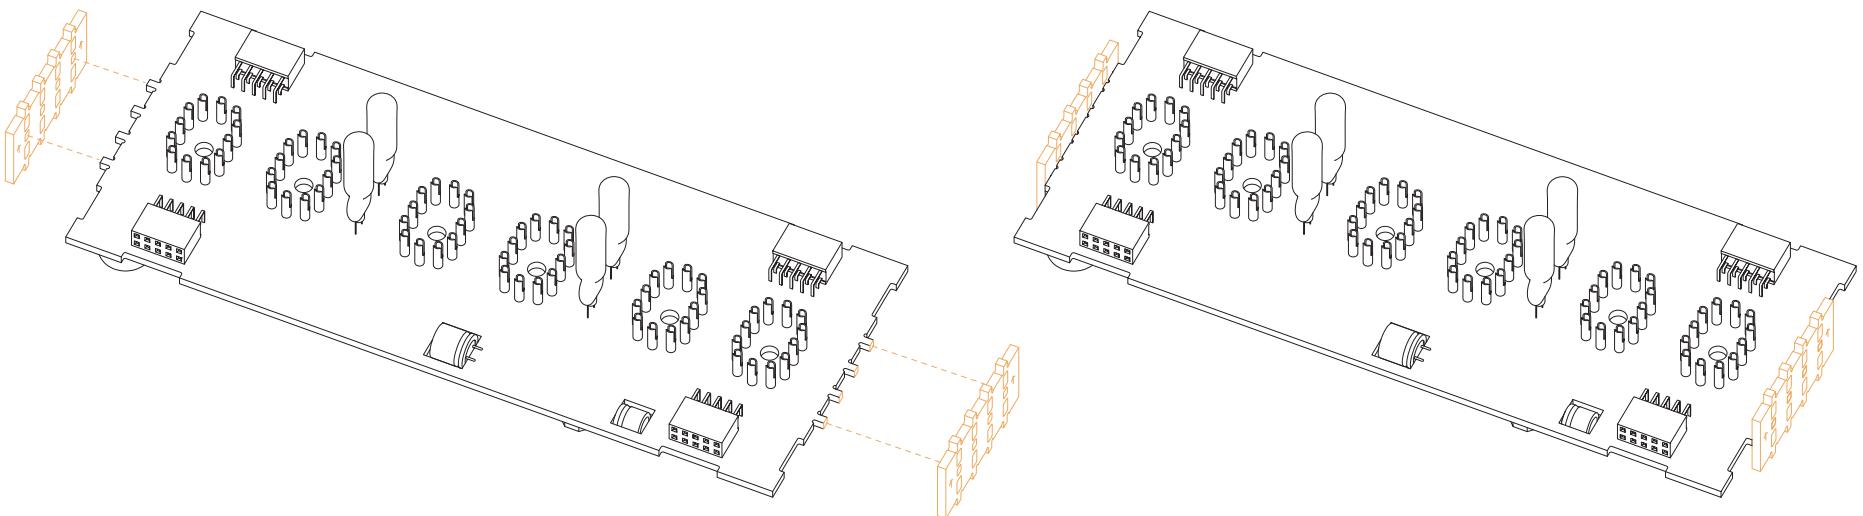



Not only our nixies, but also the neon bulbs (dots) are original. They come from the period between 1980 and 1990. For this reason, they may flash for the first 45 days, after which they stabilize. This is not a defect.

Pay attention to the orientation of the arrow.

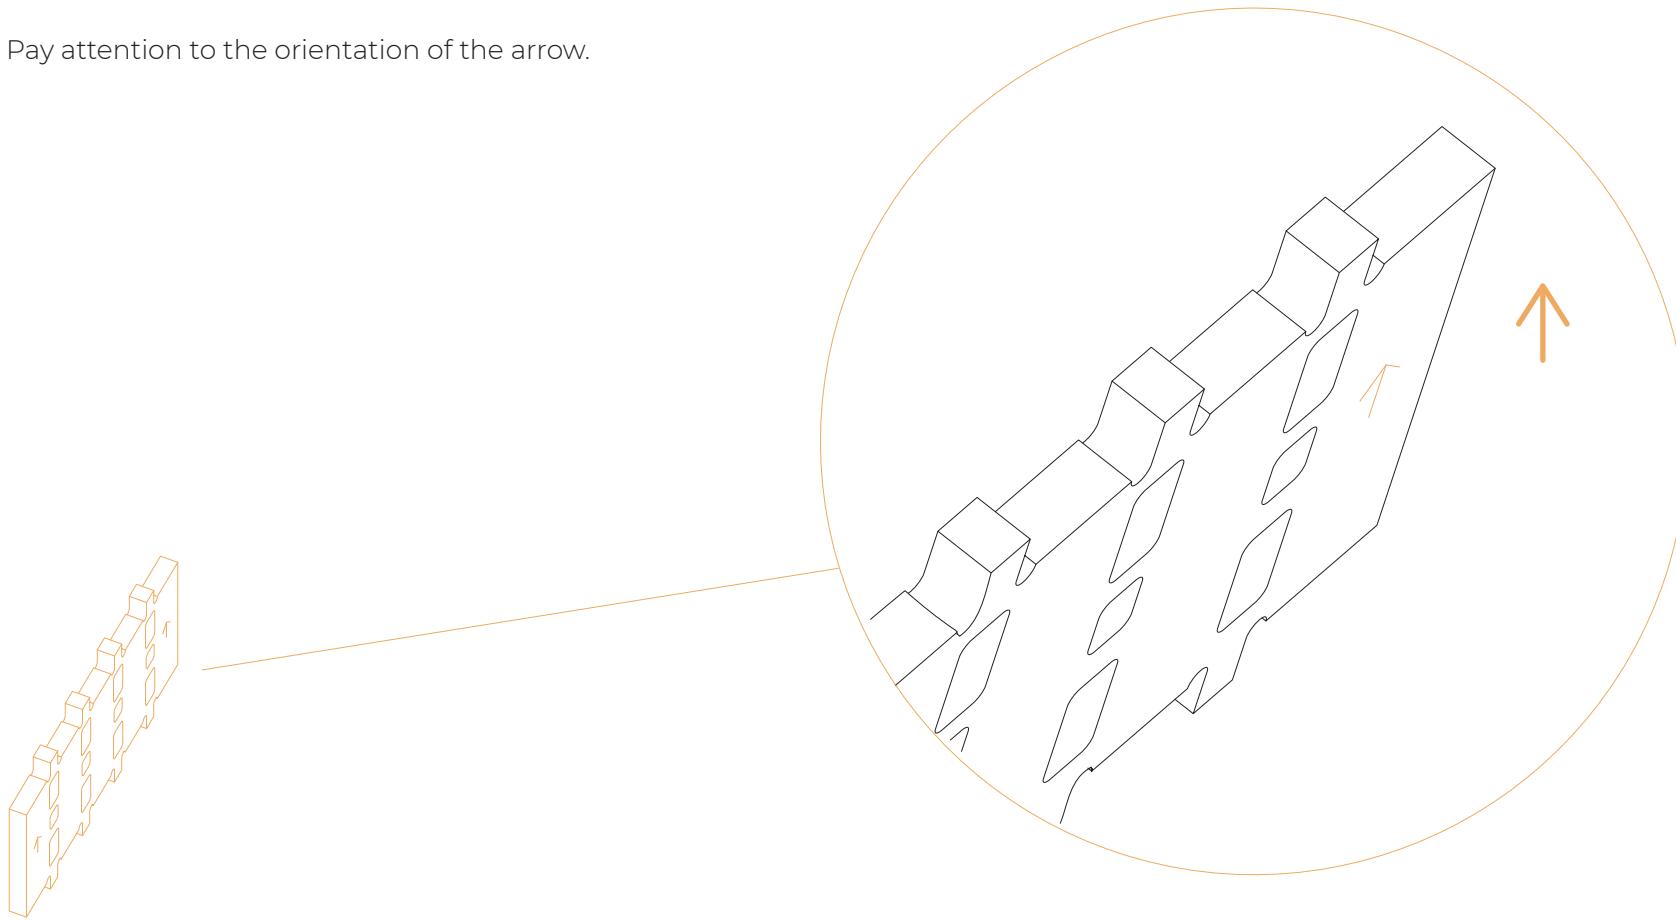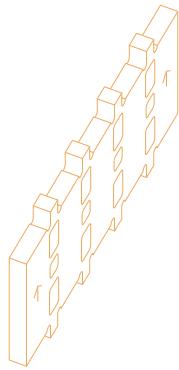

3.

Make sure the arrow is oriented correctly.

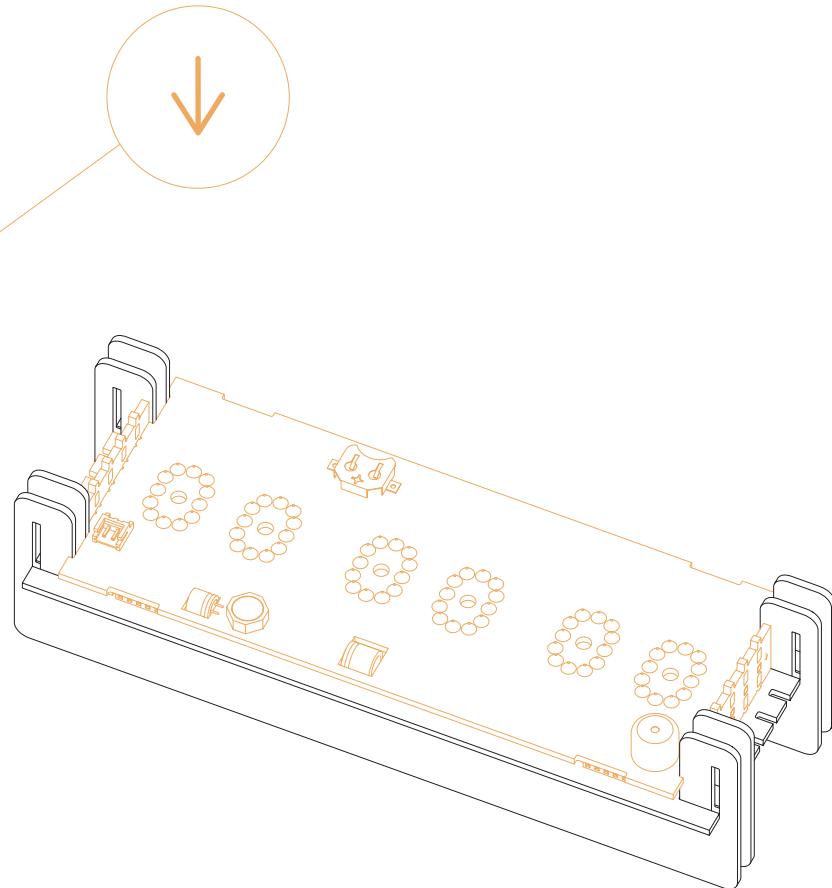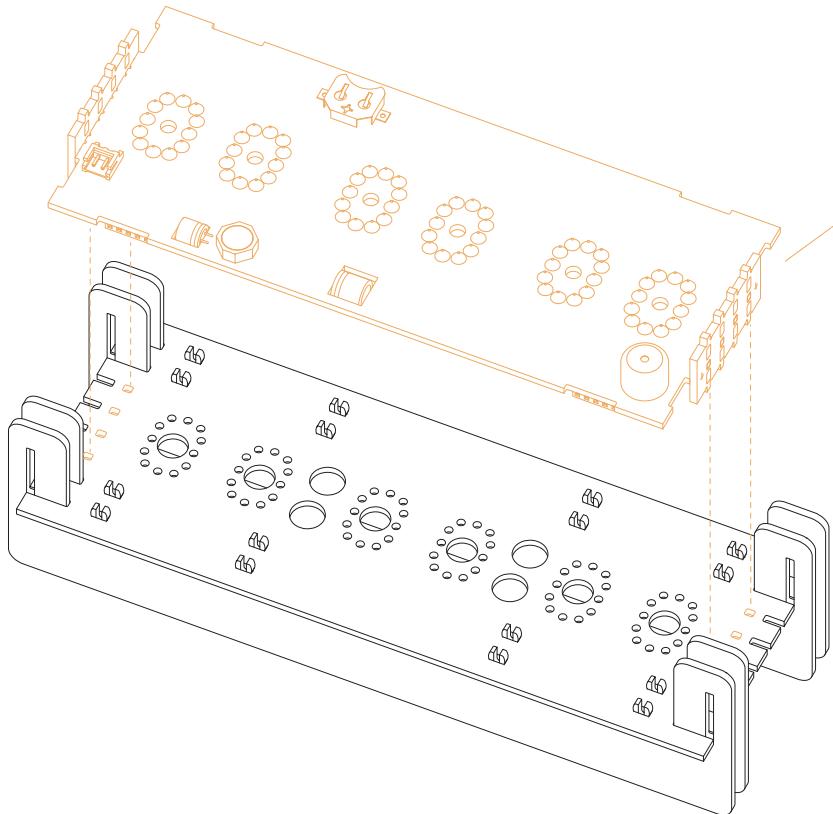



4.

There is already CR1216 battery placed inside the holder.


If the clock does not hold the time after a power failure, the battery needs to be replaced.

The battery needs to be replaced once in approximately 5 to 6 years.

Insert the battery into the holder with the + symbol facing away from the main board!

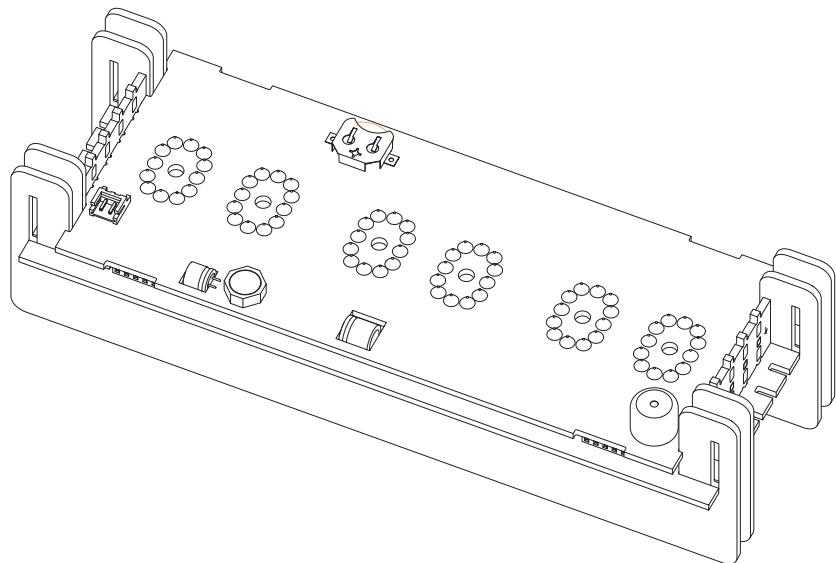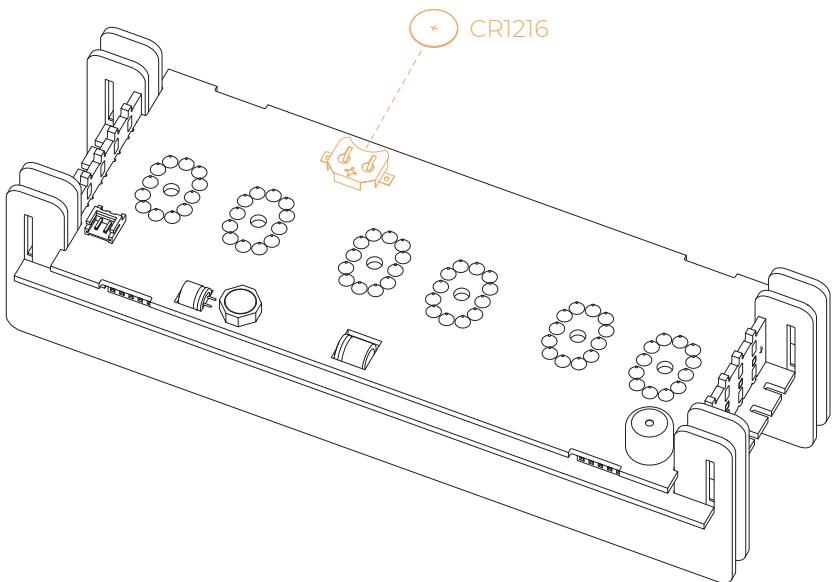



5.

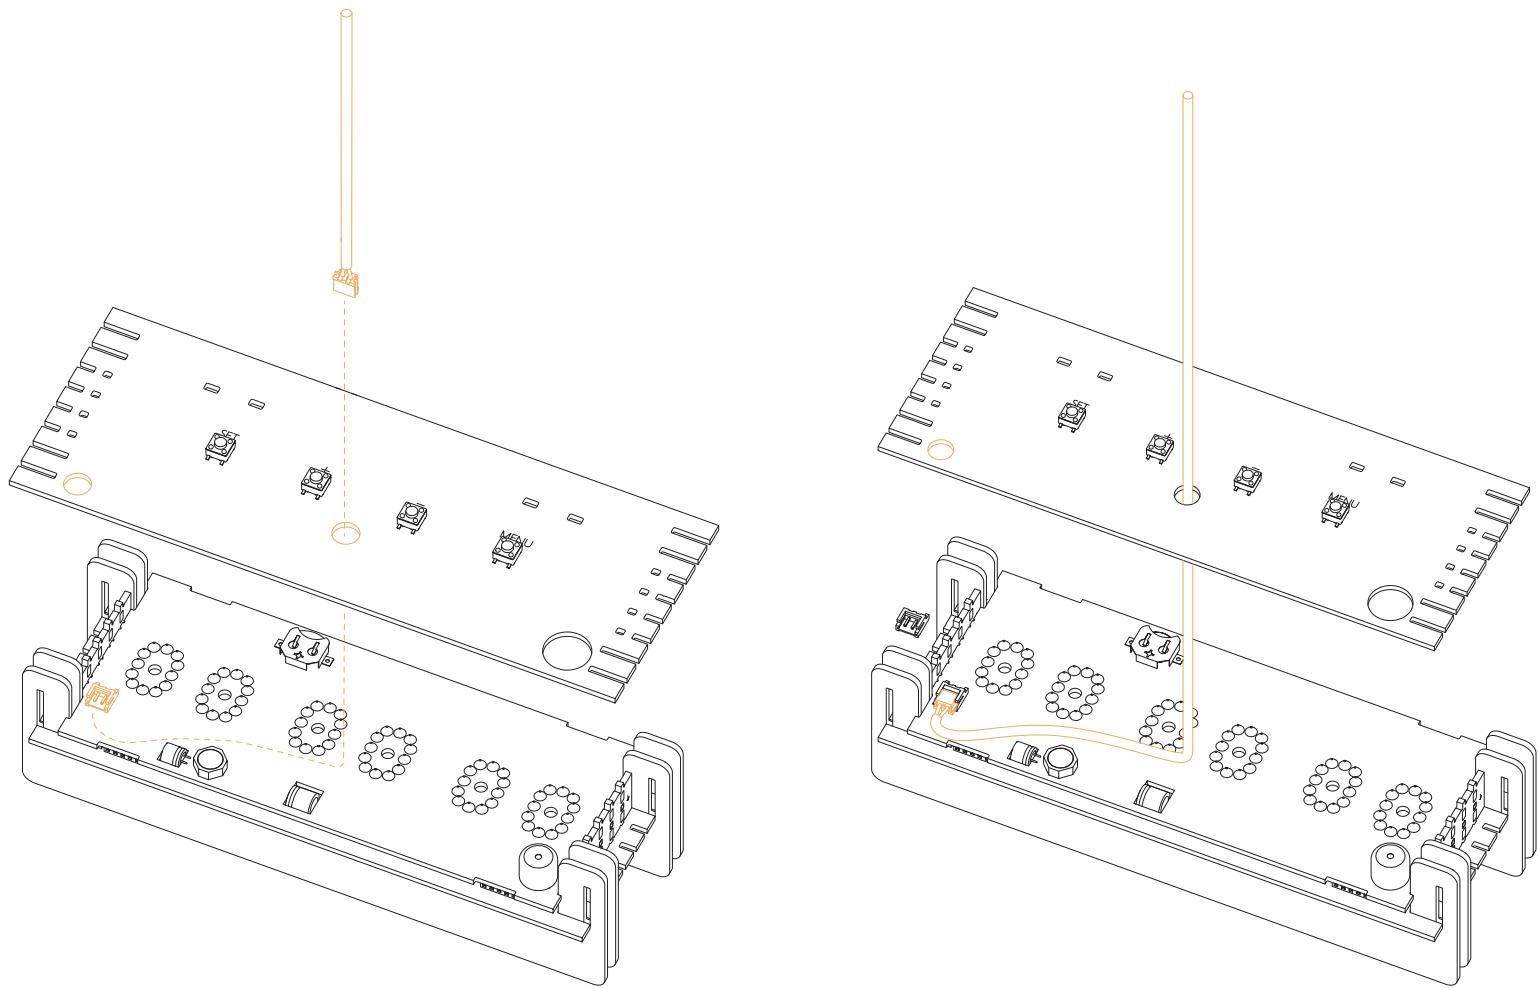




If you prefer, you can pass the cable through the hole on the left (in the picture also highlighted in color).

For safety reasons, the cable connector can only be connected in one direction. If you are unable to connect the connector, just turn it over.

6.

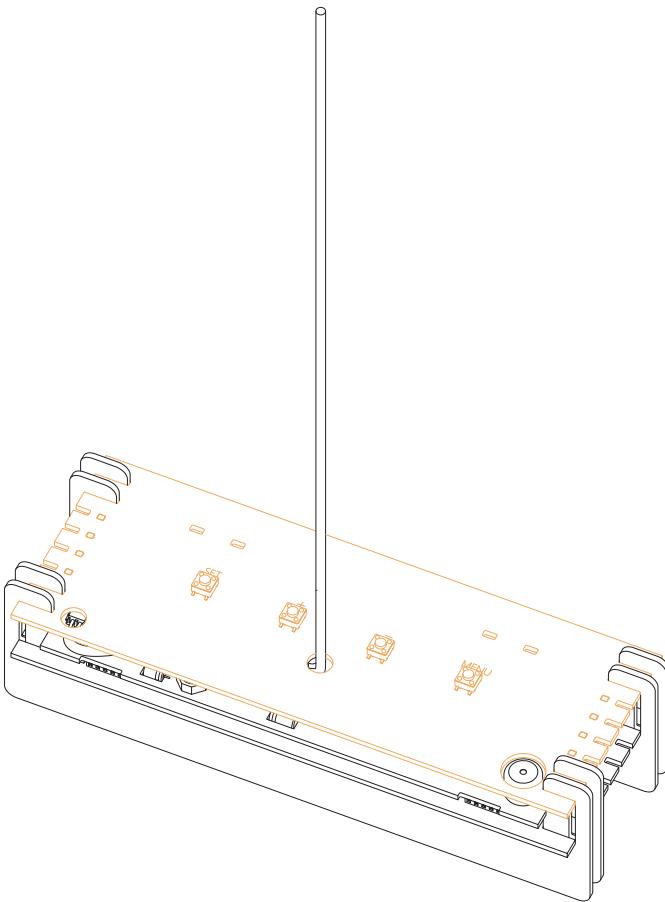
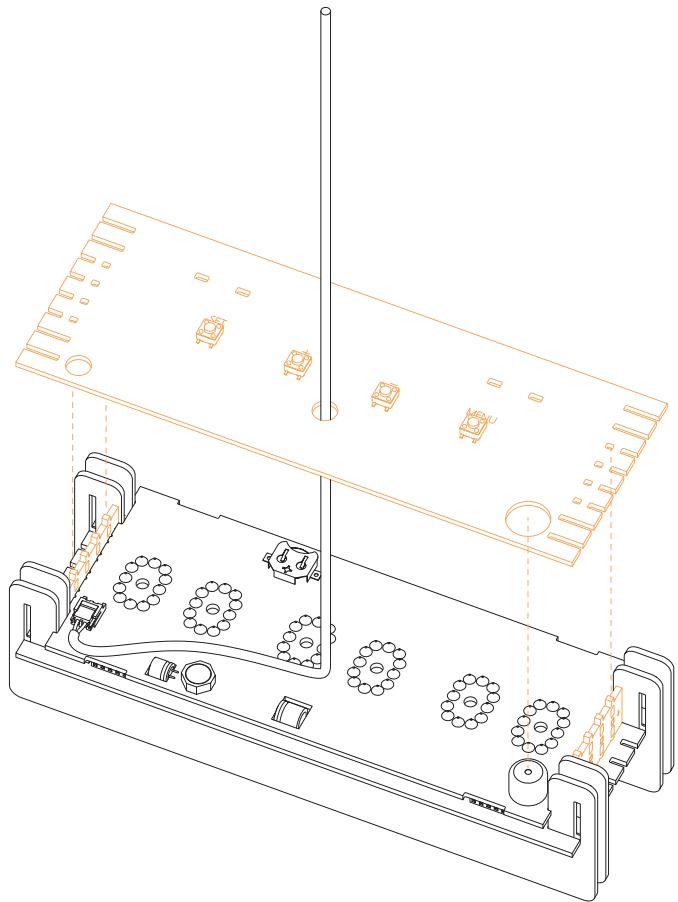


7.

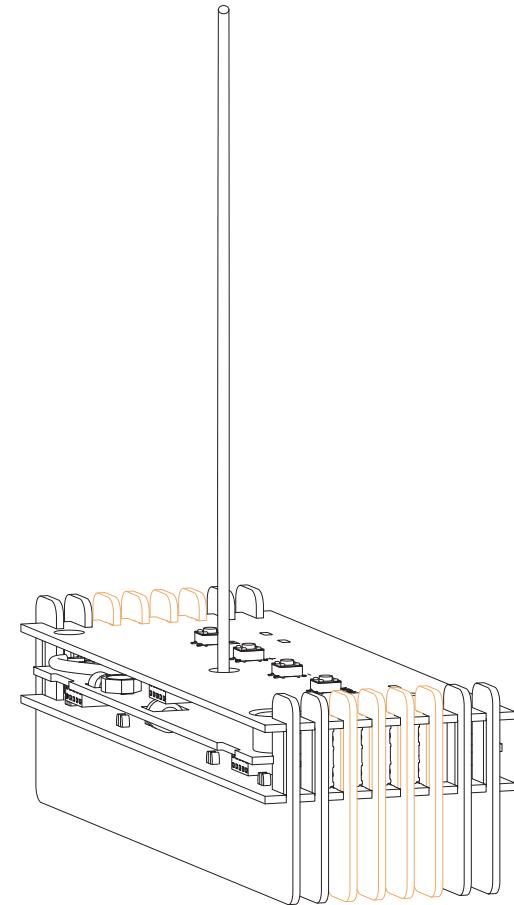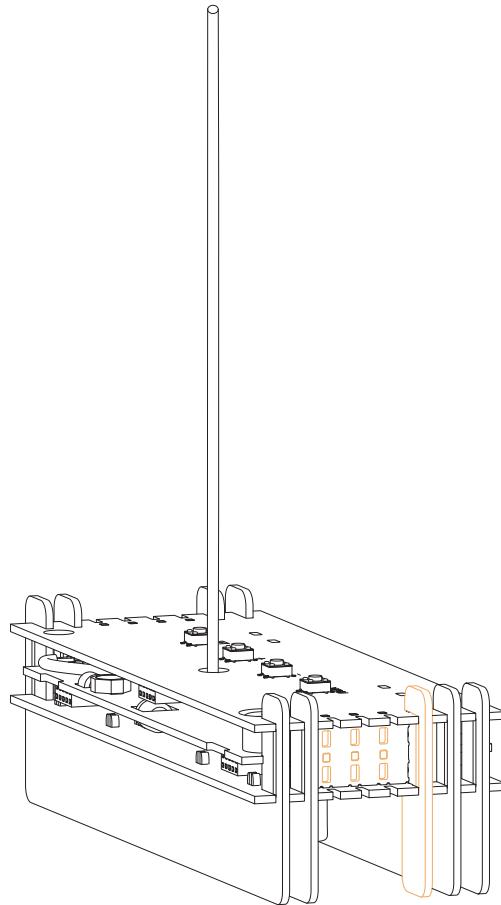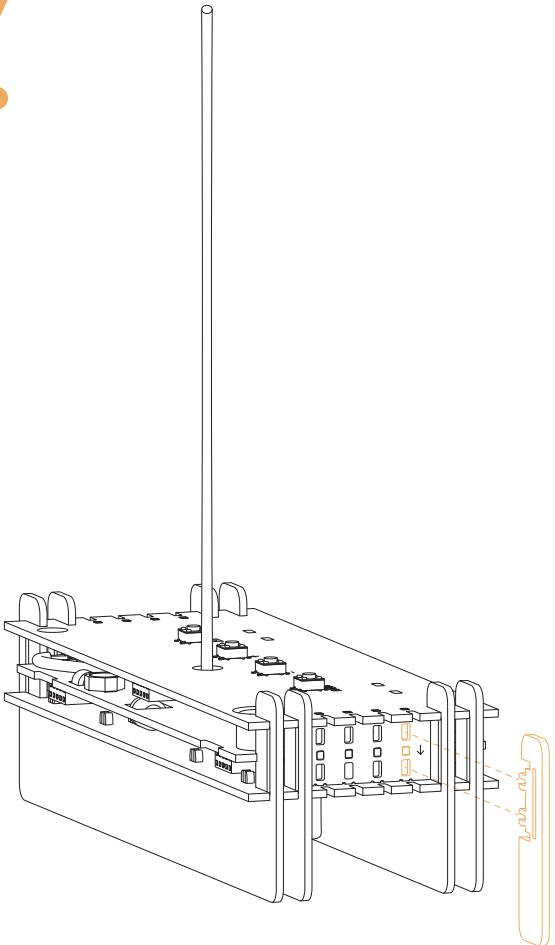

Thanks to the precision of the joints, more assembly force is required to achieve a firm connection.
We recommend using a solid surface and pushing against it.




8.

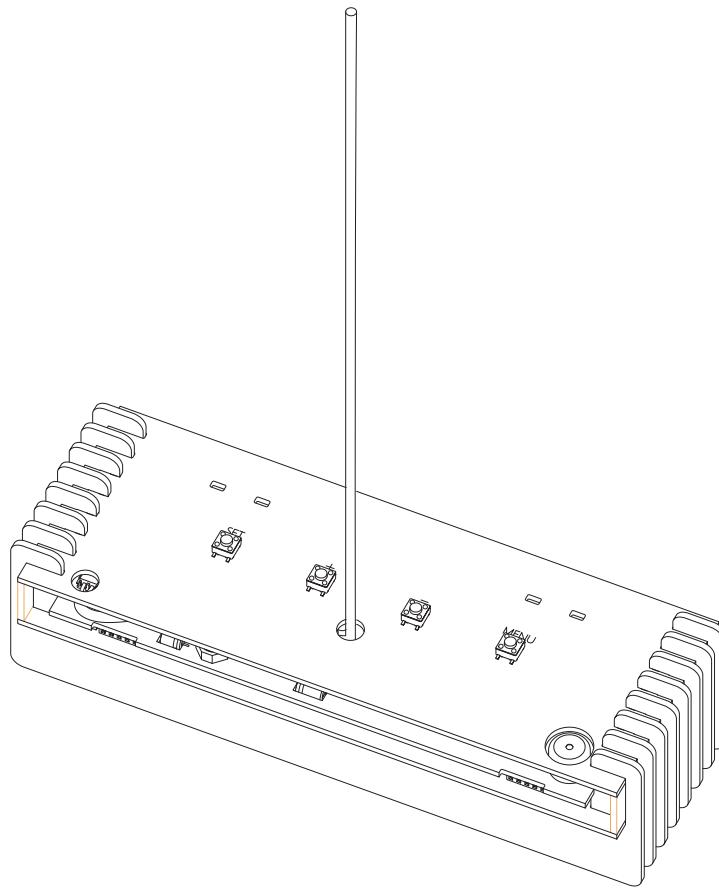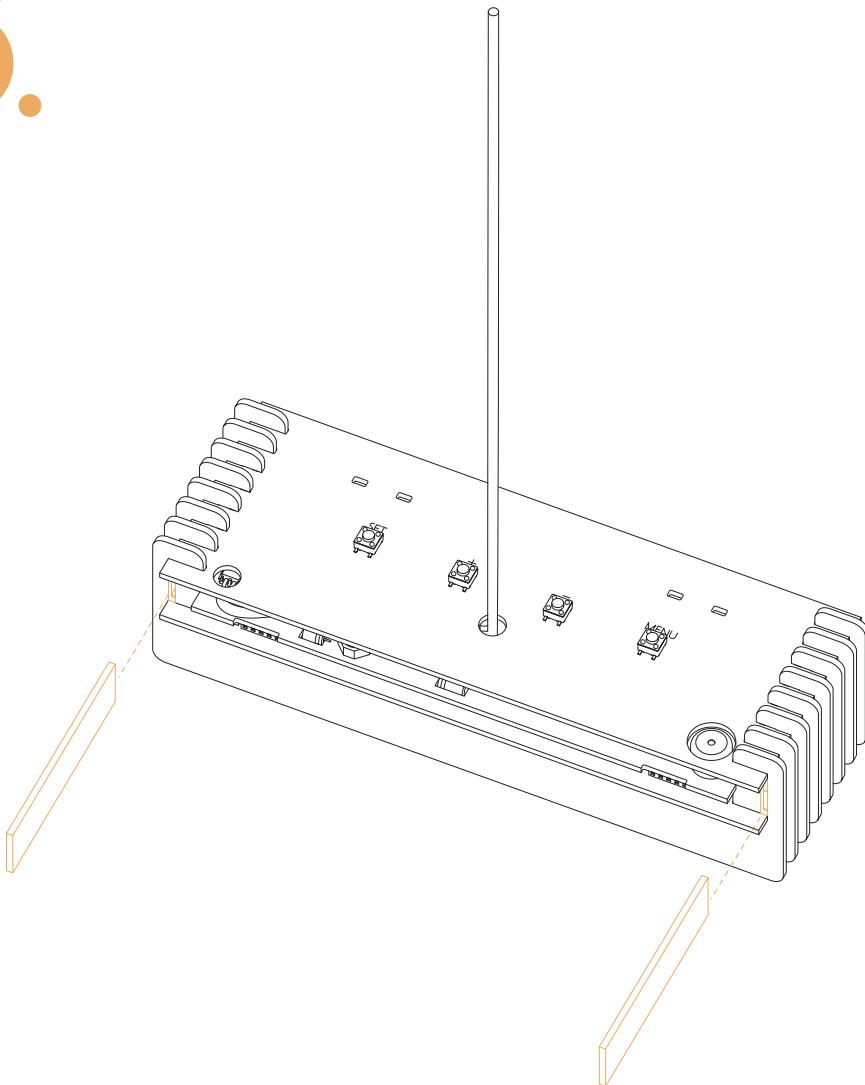


9.

Connect the pin headers to appropriate pin sockets according to the pictures.

The middle row of pins belongs to the corresponding sockets in the row closer to the center!

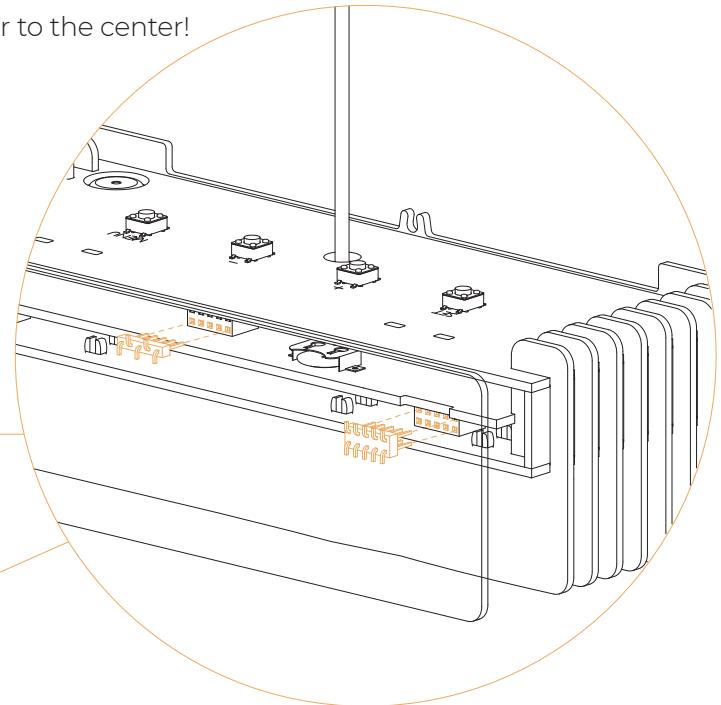
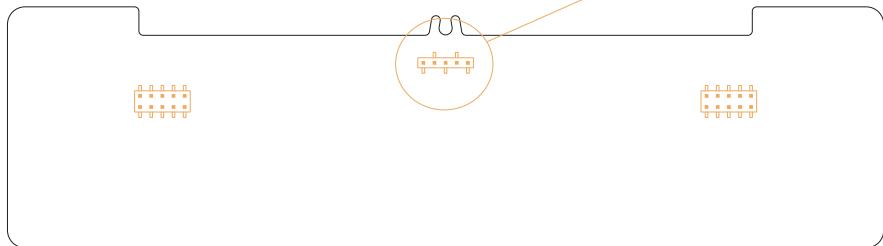
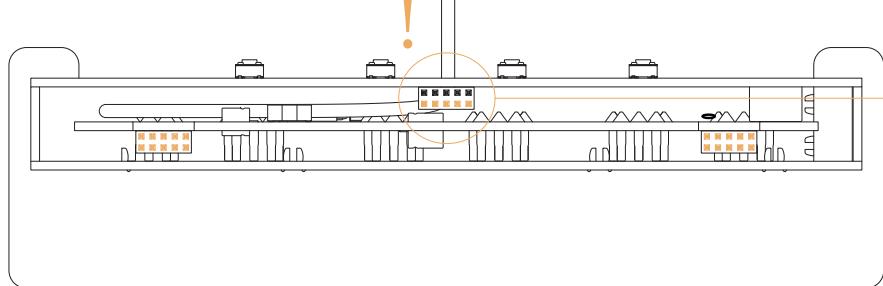


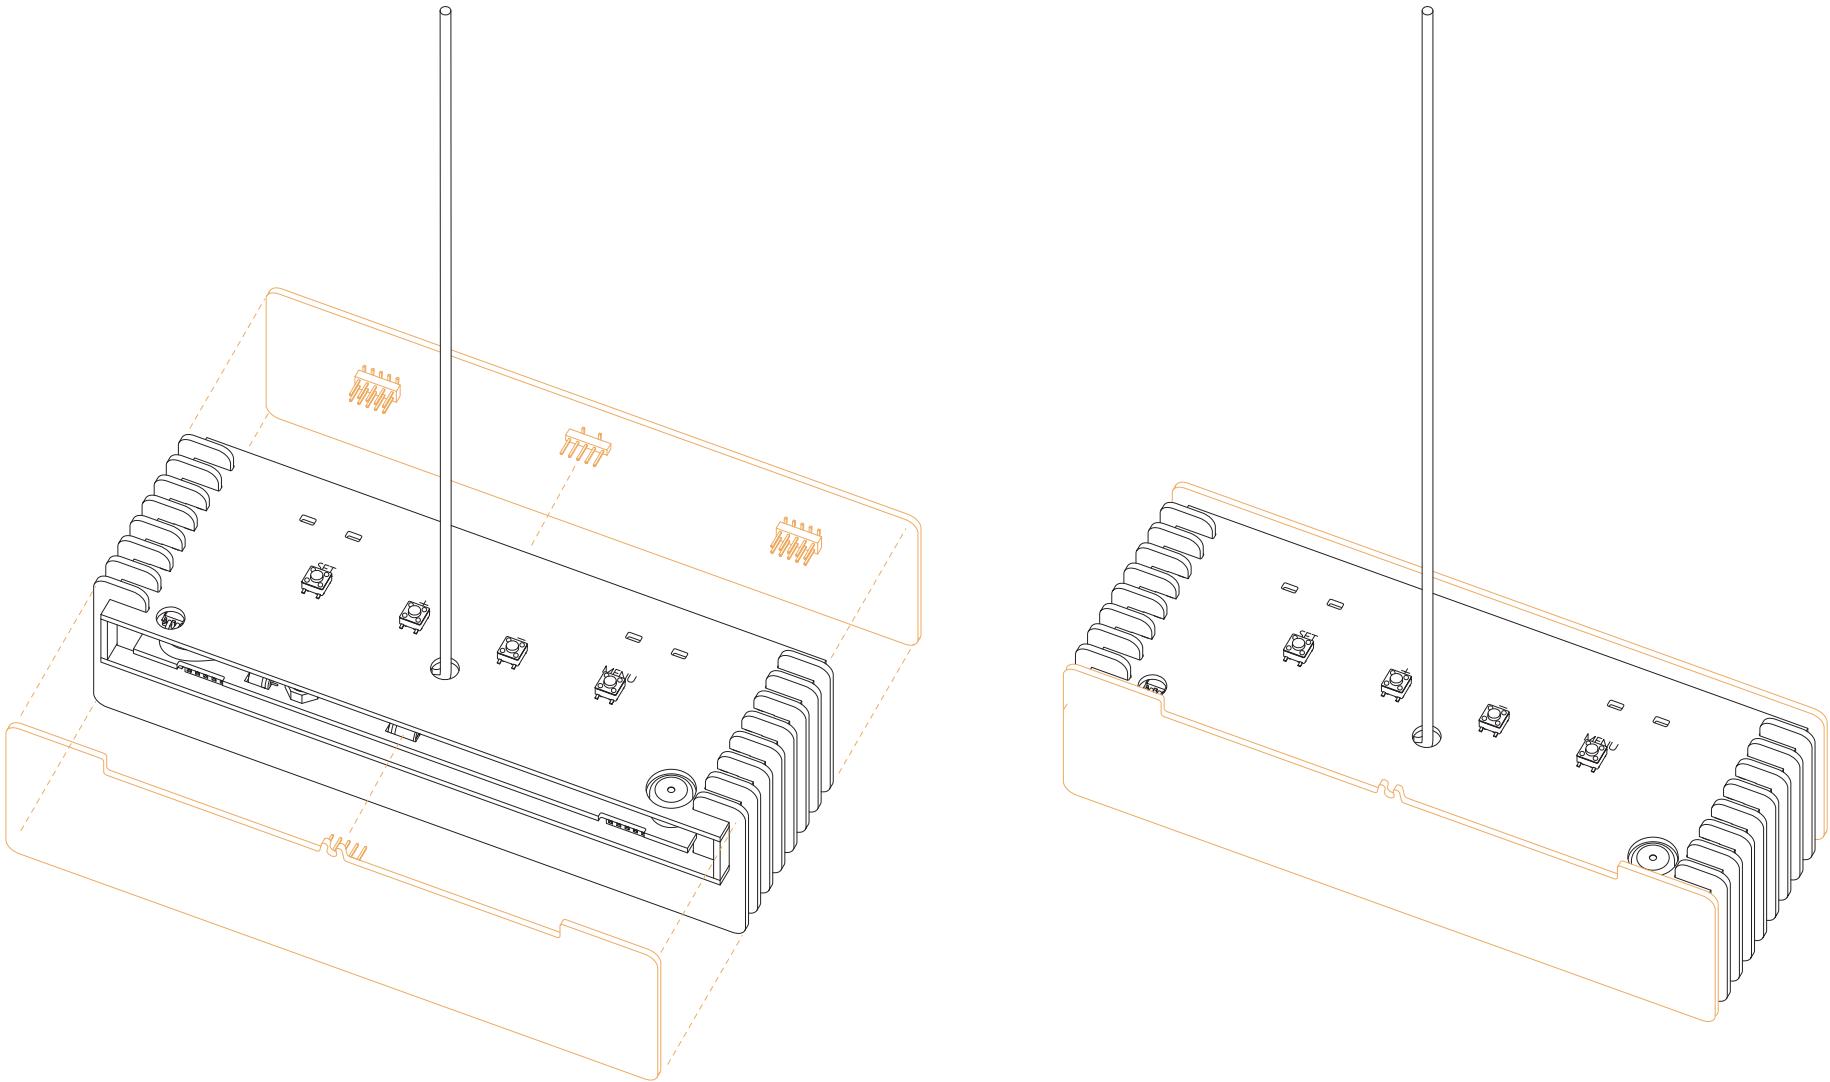

Tip: To verify that the connectors are connected properly, make sure that all the ribs are neatly arranged in a row.


10.

This step is preparing the clock for hanging on a wall.
You can skip this step if you wish to place the clock on a table.

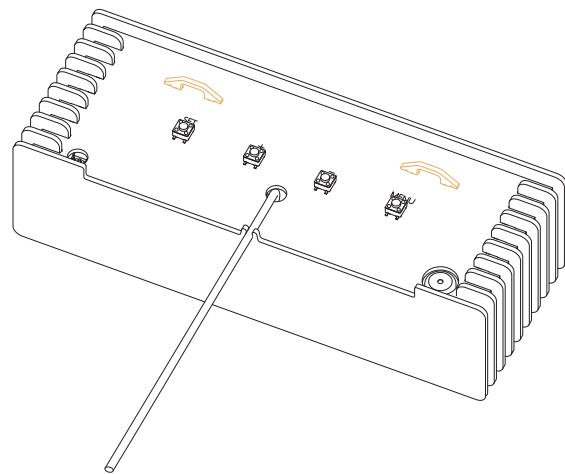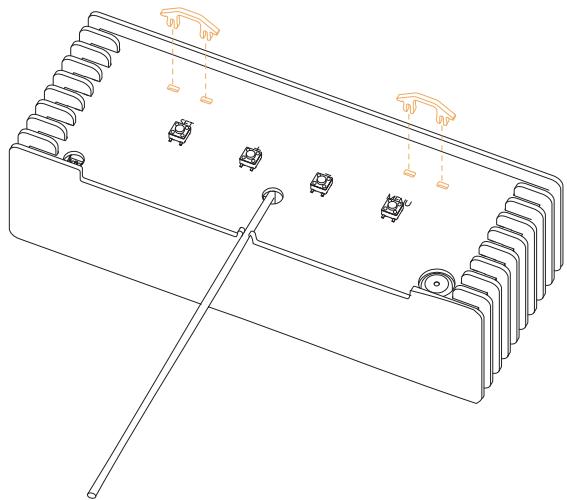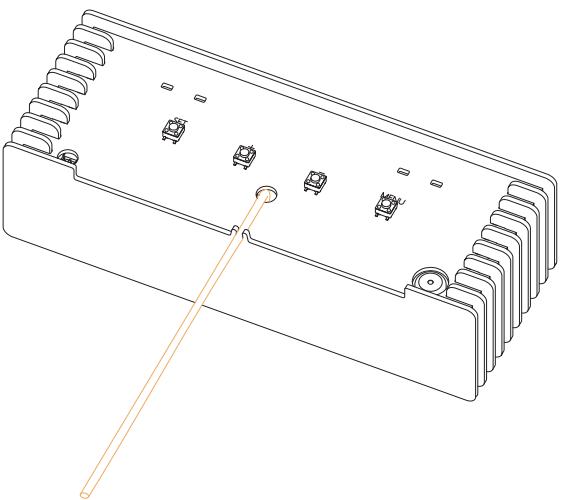


III.

Make sure that the digitrons (display units) are oriented correctly.
Follow the picture below and the number 3 on the digitron.

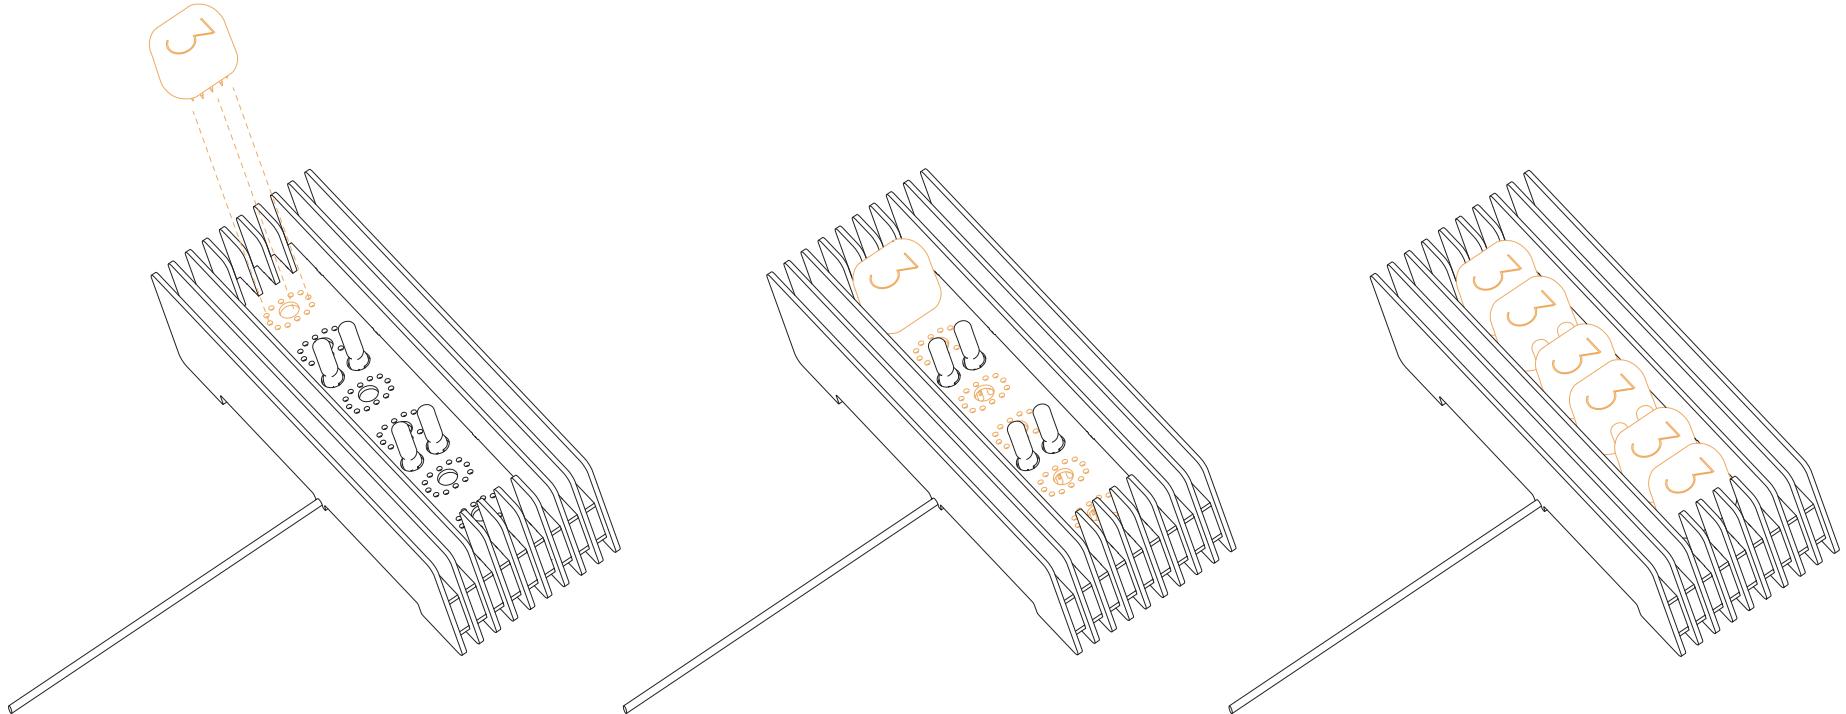

If any of the digits doesn't light up, try interchanging the nixie tubes or adjusting the contact
(for example, by pressing the contact with tweezers).

12.

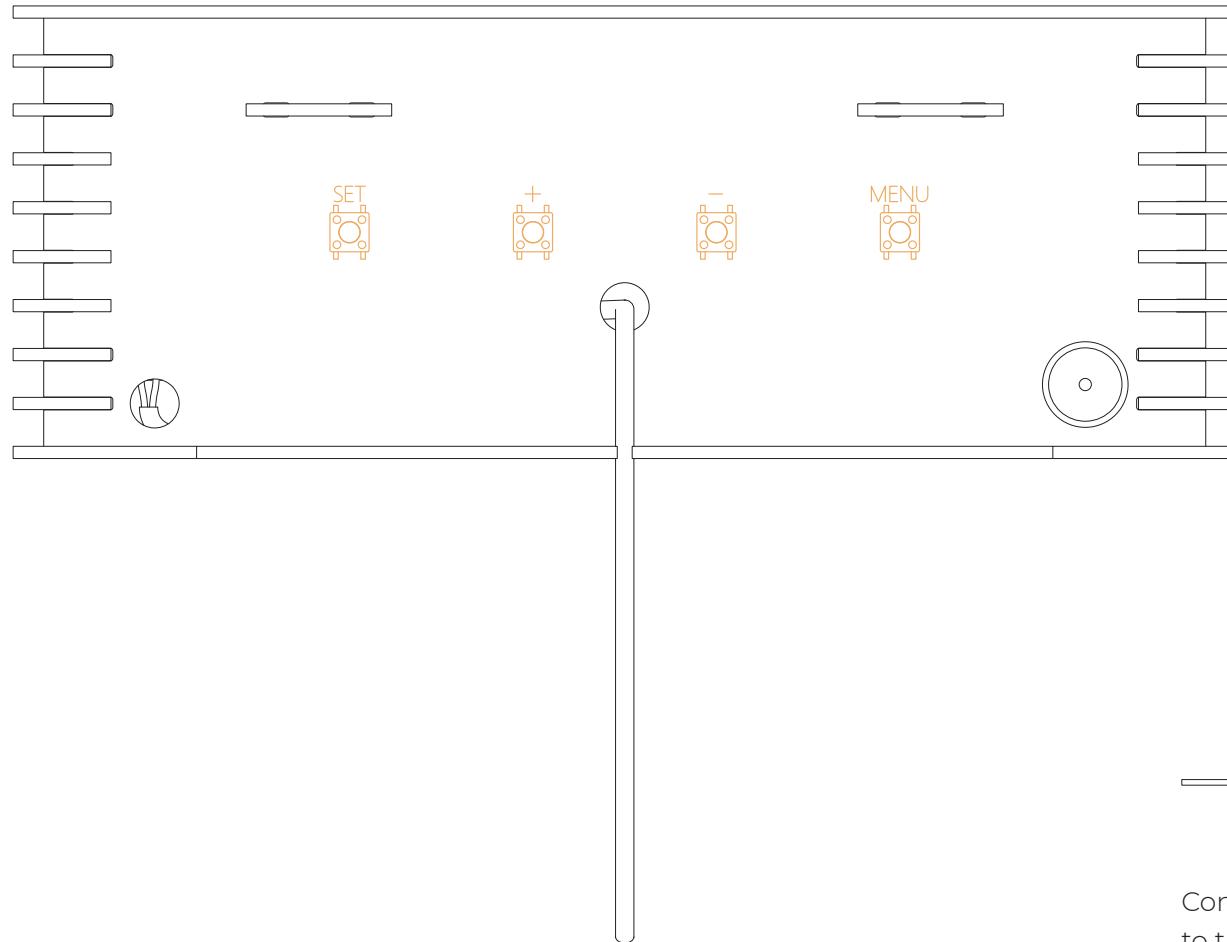


If any of the buttons do not work, check the connection from the step 9.

Connect the power cord
to the power supply.

1. TIME SETTING

Use the buttons on the back of the clock to set the date and time.

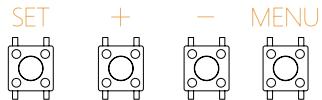


2.

Hold down the **MENU** button. As soon as the first group of digits starts flashing, you can start setting the time.

3.

Use the **+** and **-** buttons to set the correct time in 24-hour format. Set the time in this order: hours - minutes - seconds

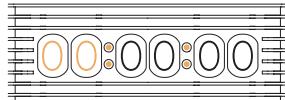


Press the **SET** button to confirm the setting of the first pair of digitrons. Set the following two pairs in the same way.

4.

After successfully setting the time, the colons will change to dots and the right pair of digitrons will start flashing.

5. DATE SETTING

Now set the date the same way as time. It will be displayed in this order: day - month - year

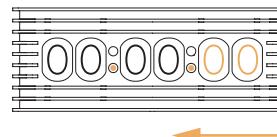

When setting the date, proceed from right to left. This means you will be setting the year first.

Confirm the individual pairs again by pressing the **SET** button.

6.

Your Nixie clock is now ready to use.

DATE DISPLAY

In the factory setting, the clock displays the date every 10 seconds. To deactivate this function, hold down the **-** button until you hear a beep.

Hold down the **+** button to display the date again until you hear a beep.

TIME FORMAT

To switch between 12 and 24 hour format, hold down the **SET** button until you hear a beep.

NOYCE
JOYCE

www.noycejoyce.com

